

## Packing Tube Nozzle Removal Instructions



Nozzles are available individually packaged to prevent damage during transit. A nozzle tip cannot sustain damage by impact against sides of a packing tube. However, vibration and movement of a nozzle during transit that is contained within a packing tube can sometimes result in lodging of a nozzle hub inside a packing tube lid.




No damage occurs to a nozzle unless it is not dislodged prior to opening a packing tube.



*Image is a nozzle hub lodged inside lid of packing tube.*



If this is observed, tap bottom of tube against table surface to dislodge nozzle before packing tube is opened. This will ensure tip does not impact side of packing tube when opening lid.

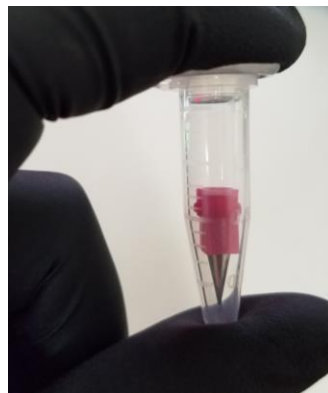

*Image of nozzle seated correctly at bottom for removal from packing tube.*



Lid can now be opened to remove nozzle for use.